

60300 To 60497
61300 To 61497

Illustrated Parts List

MODEL SERIES

60300 To 60497

TYPE NUMBERS

0010 through 0061

0110 through 0251

942000 through 942276

61300 To 61497

TYPE NUMBERS

0110 through 0183

942500 through 942659

TO FIND


**THE CORRECT NUMBER OF THE PART YOU NEED:
FOLLOW THE INSTRUCTIONS BELOW.**

- A. Refer to Engine Model, Type and Code Number (formerly Serial Number) that is stamped on the blower housing or name plate of engine. Engine type numbers such as 0147 01 are listed herein only as 0147. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification. Then use the Illustrated Parts List covering these Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Numbers are listed. **THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE".**
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type Number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.


PRINTED IN U.S.A.




60300 To 60497
61300 To 61497

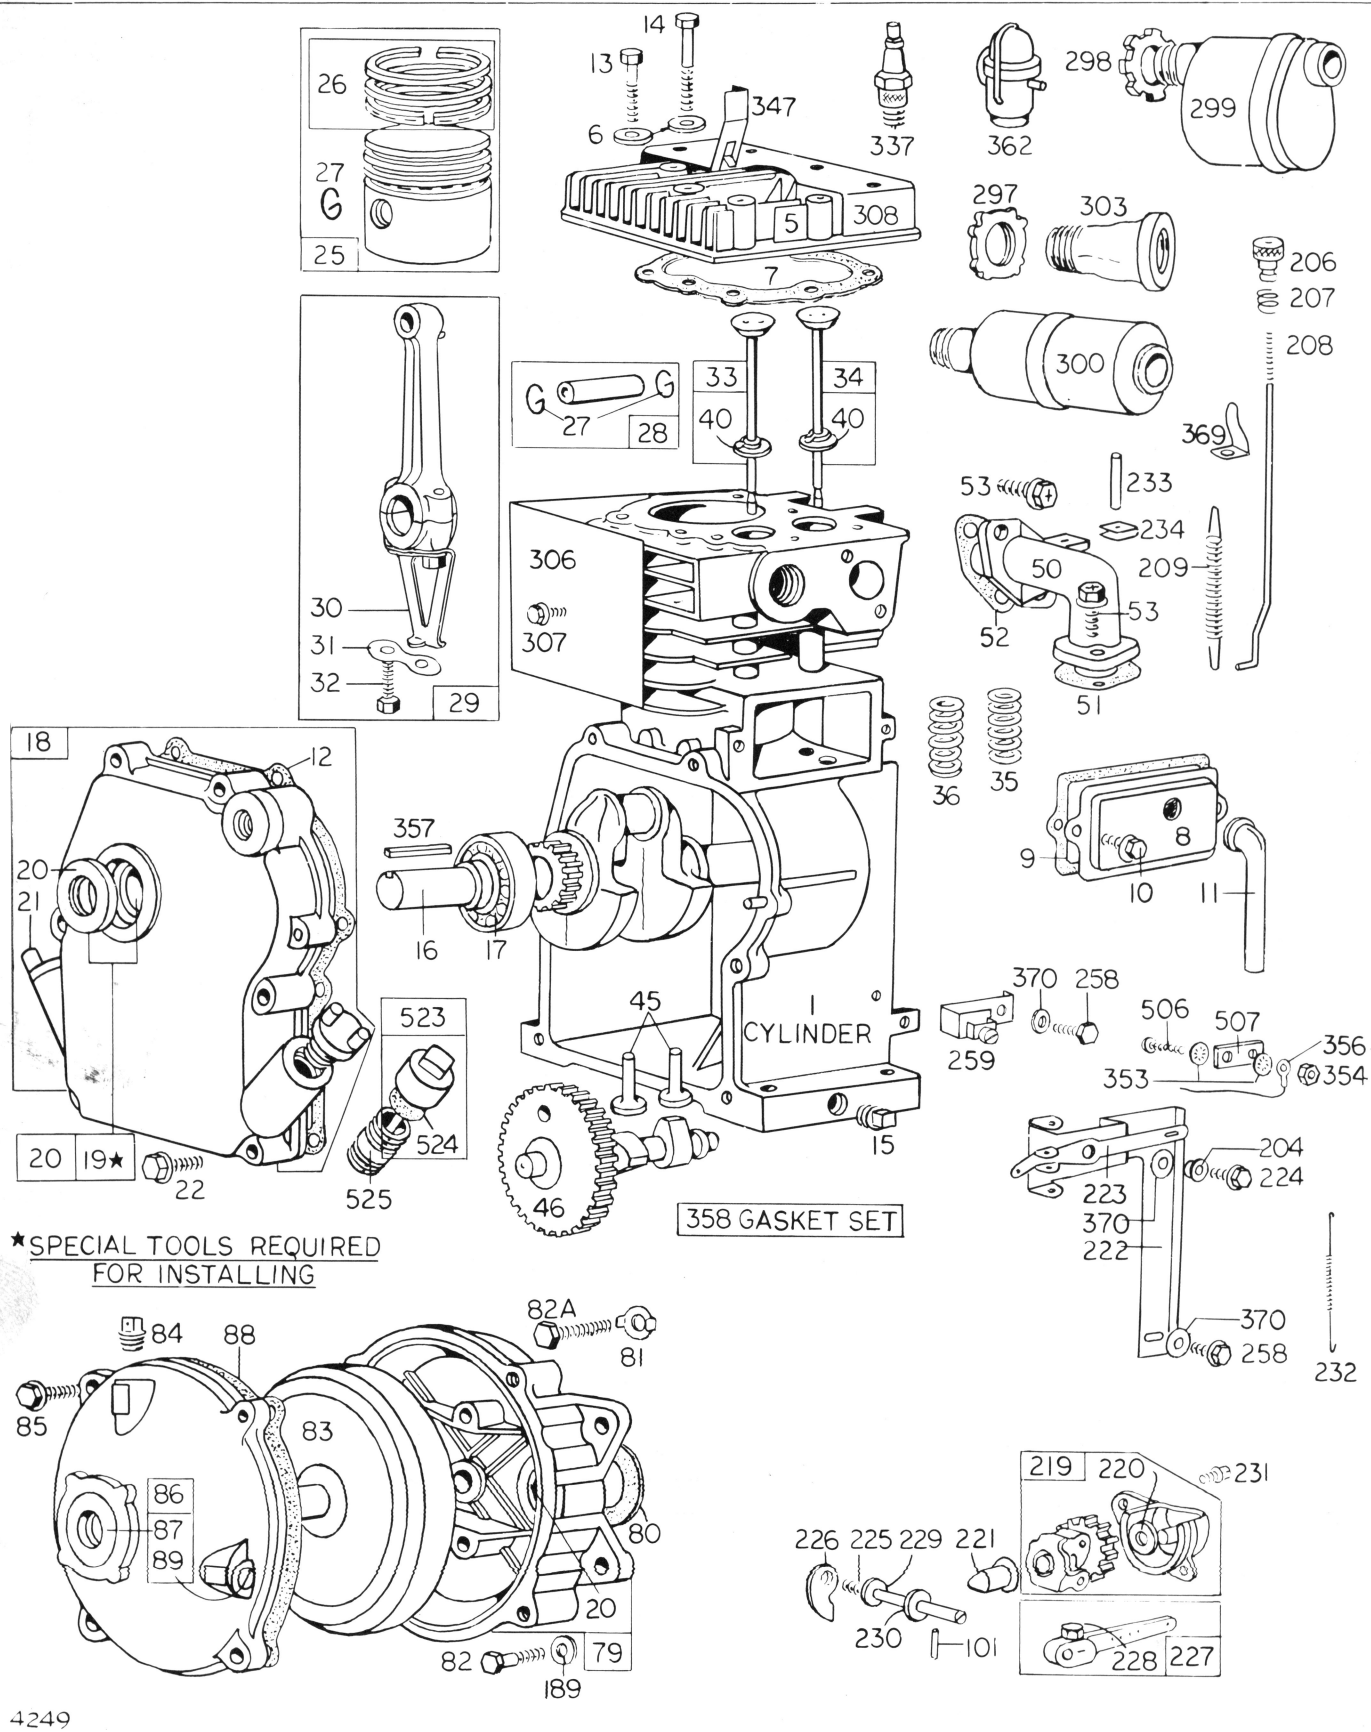


Assemblies include all parts shown in frames.

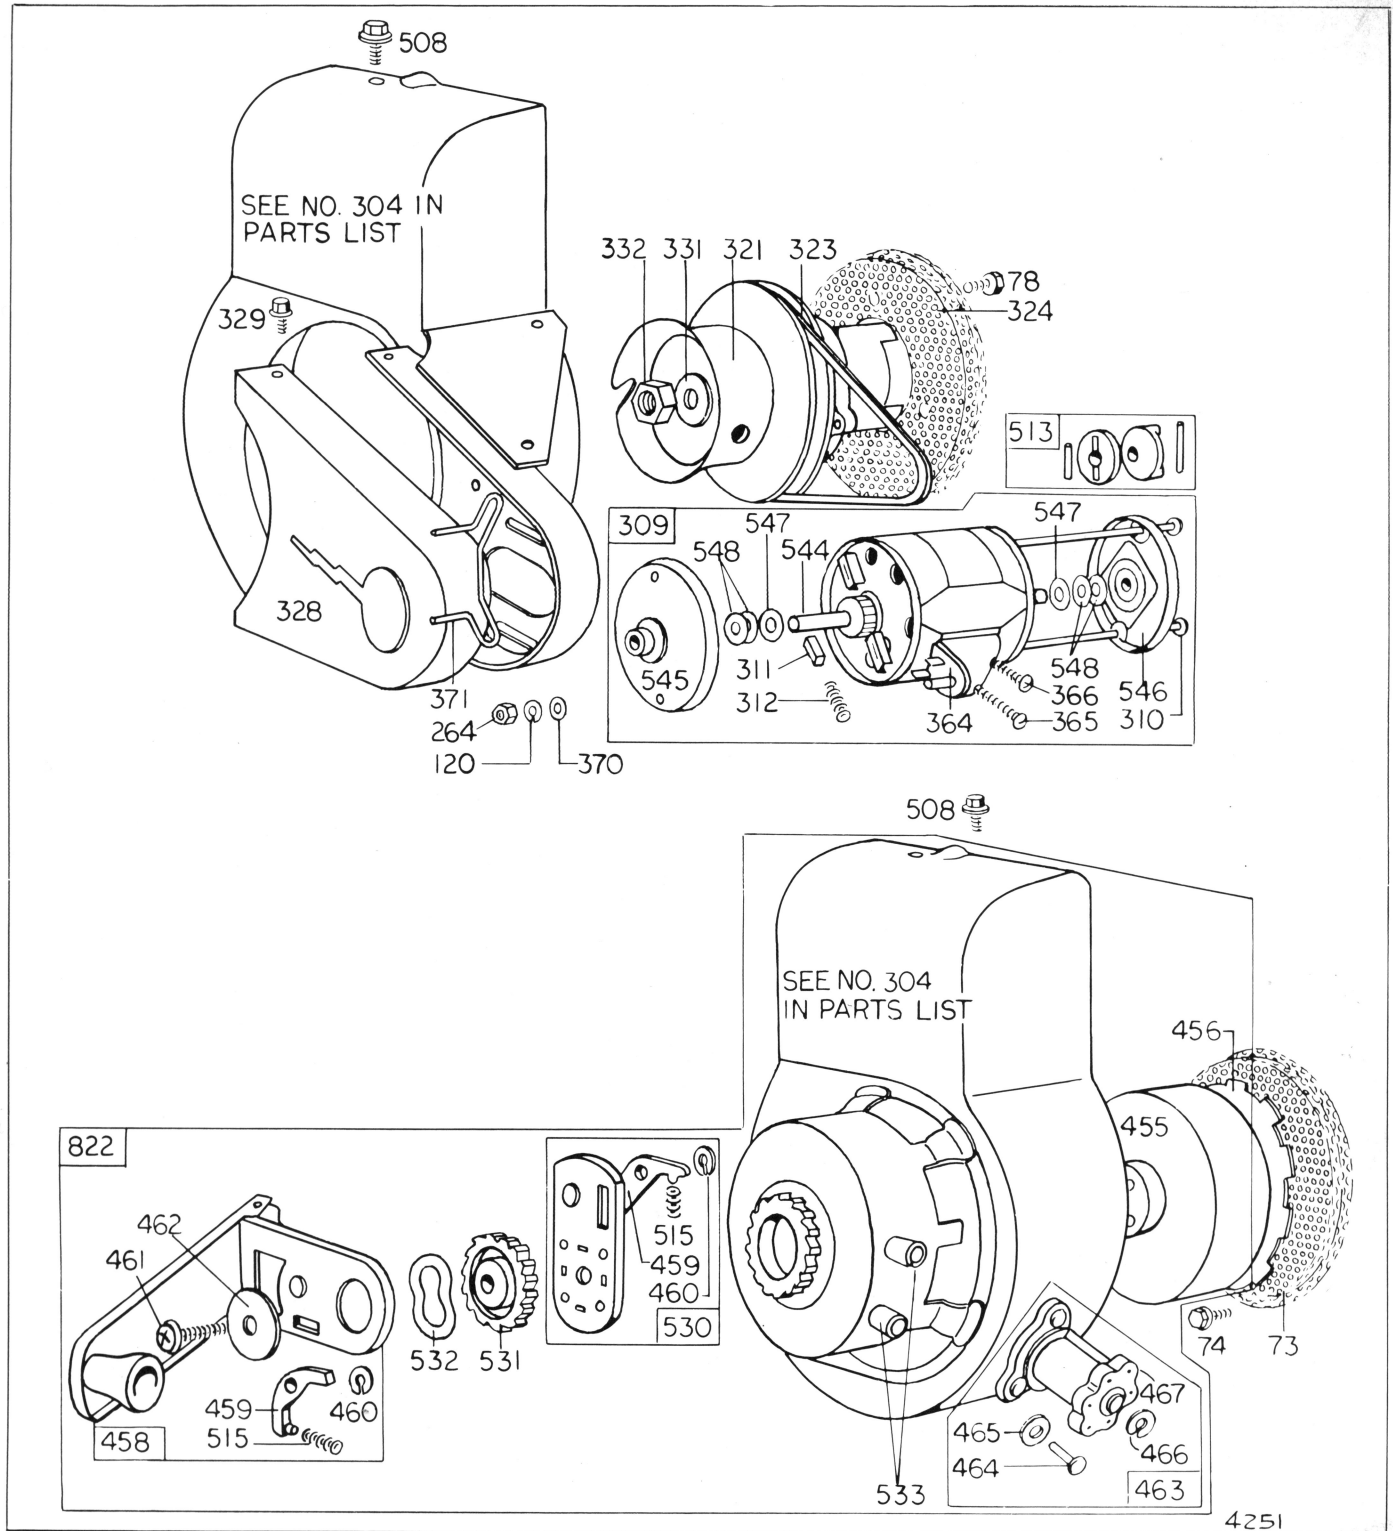

Assemblies include all parts shown in frames.

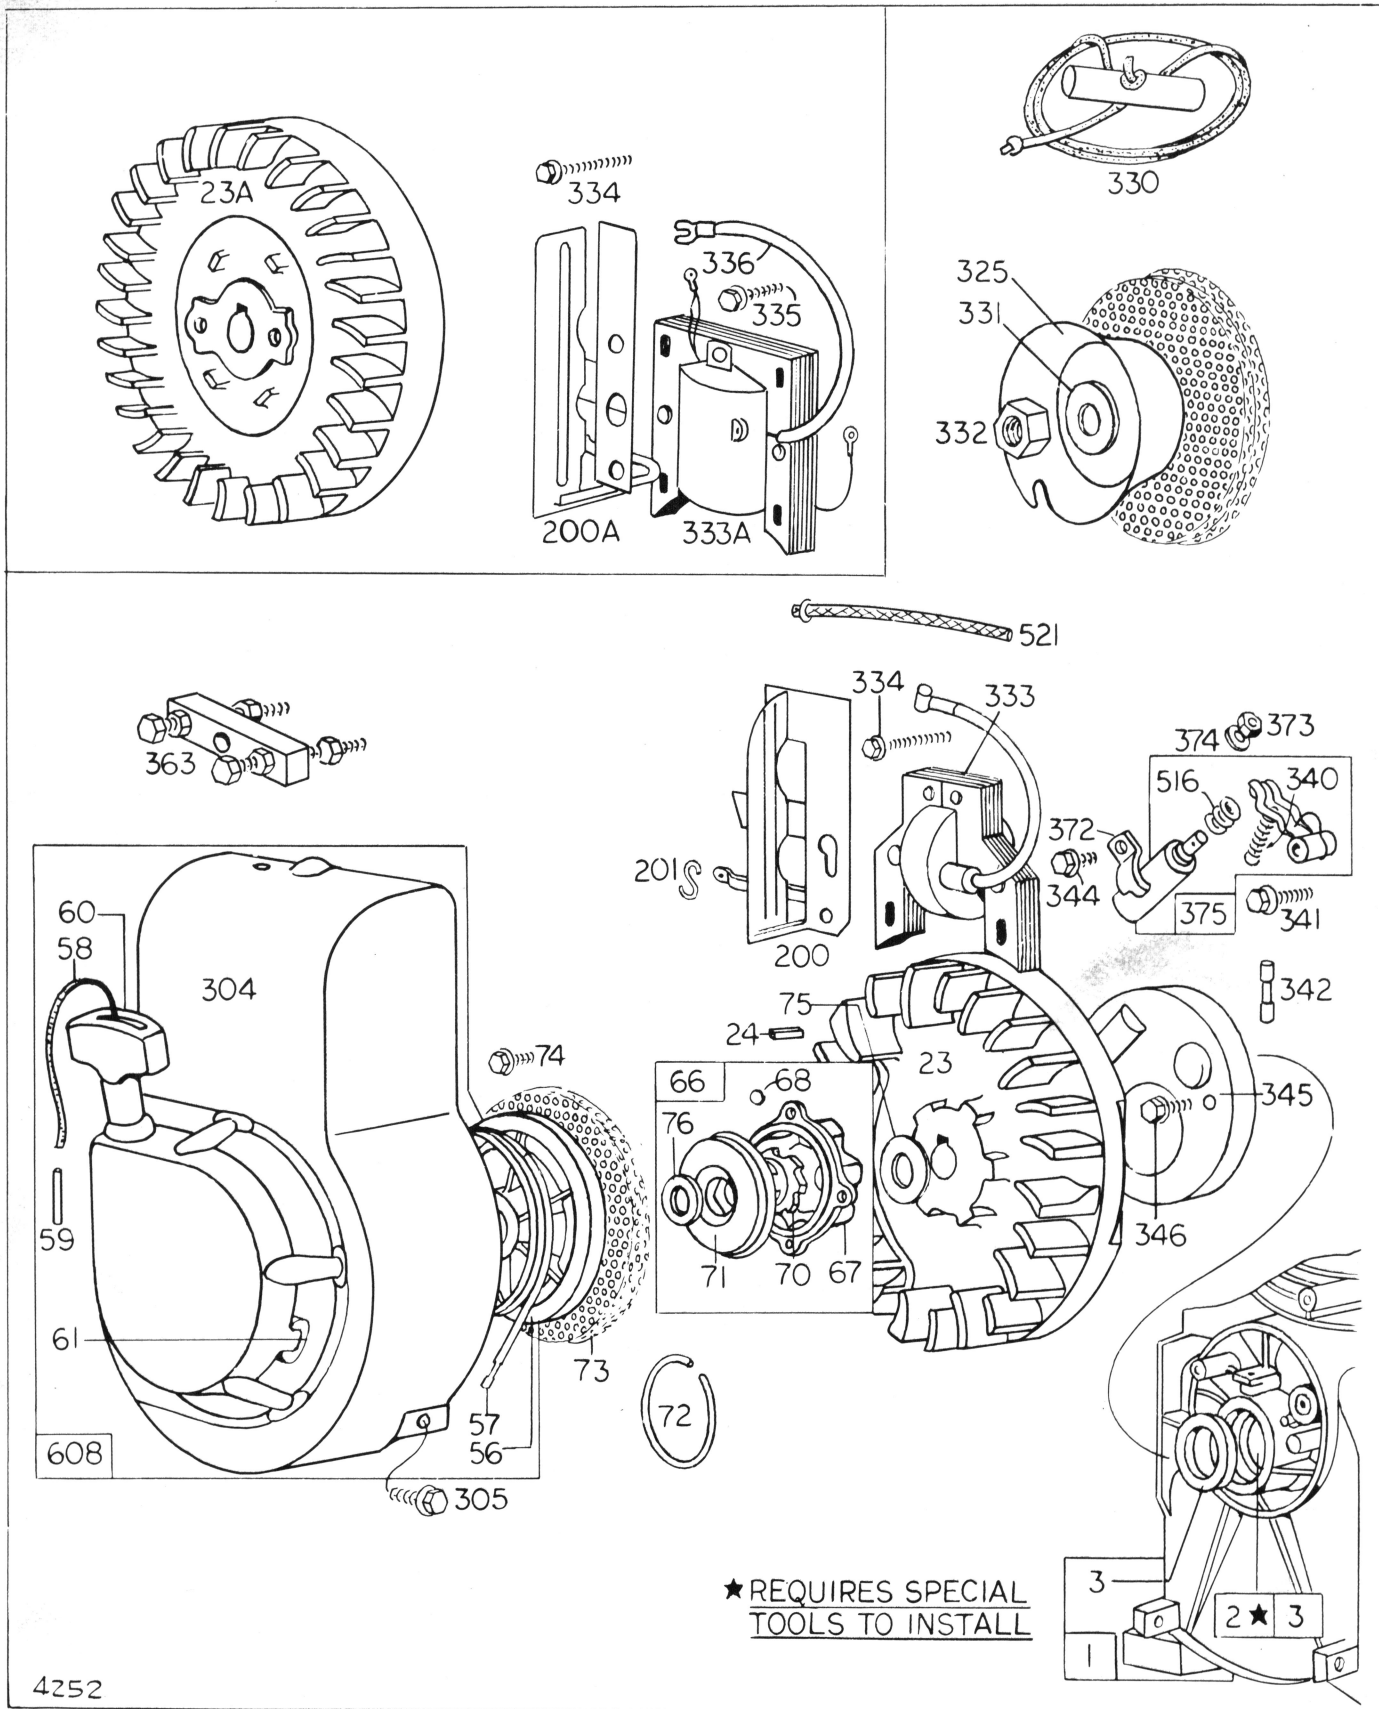

Assemblies include all parts shown in frames.

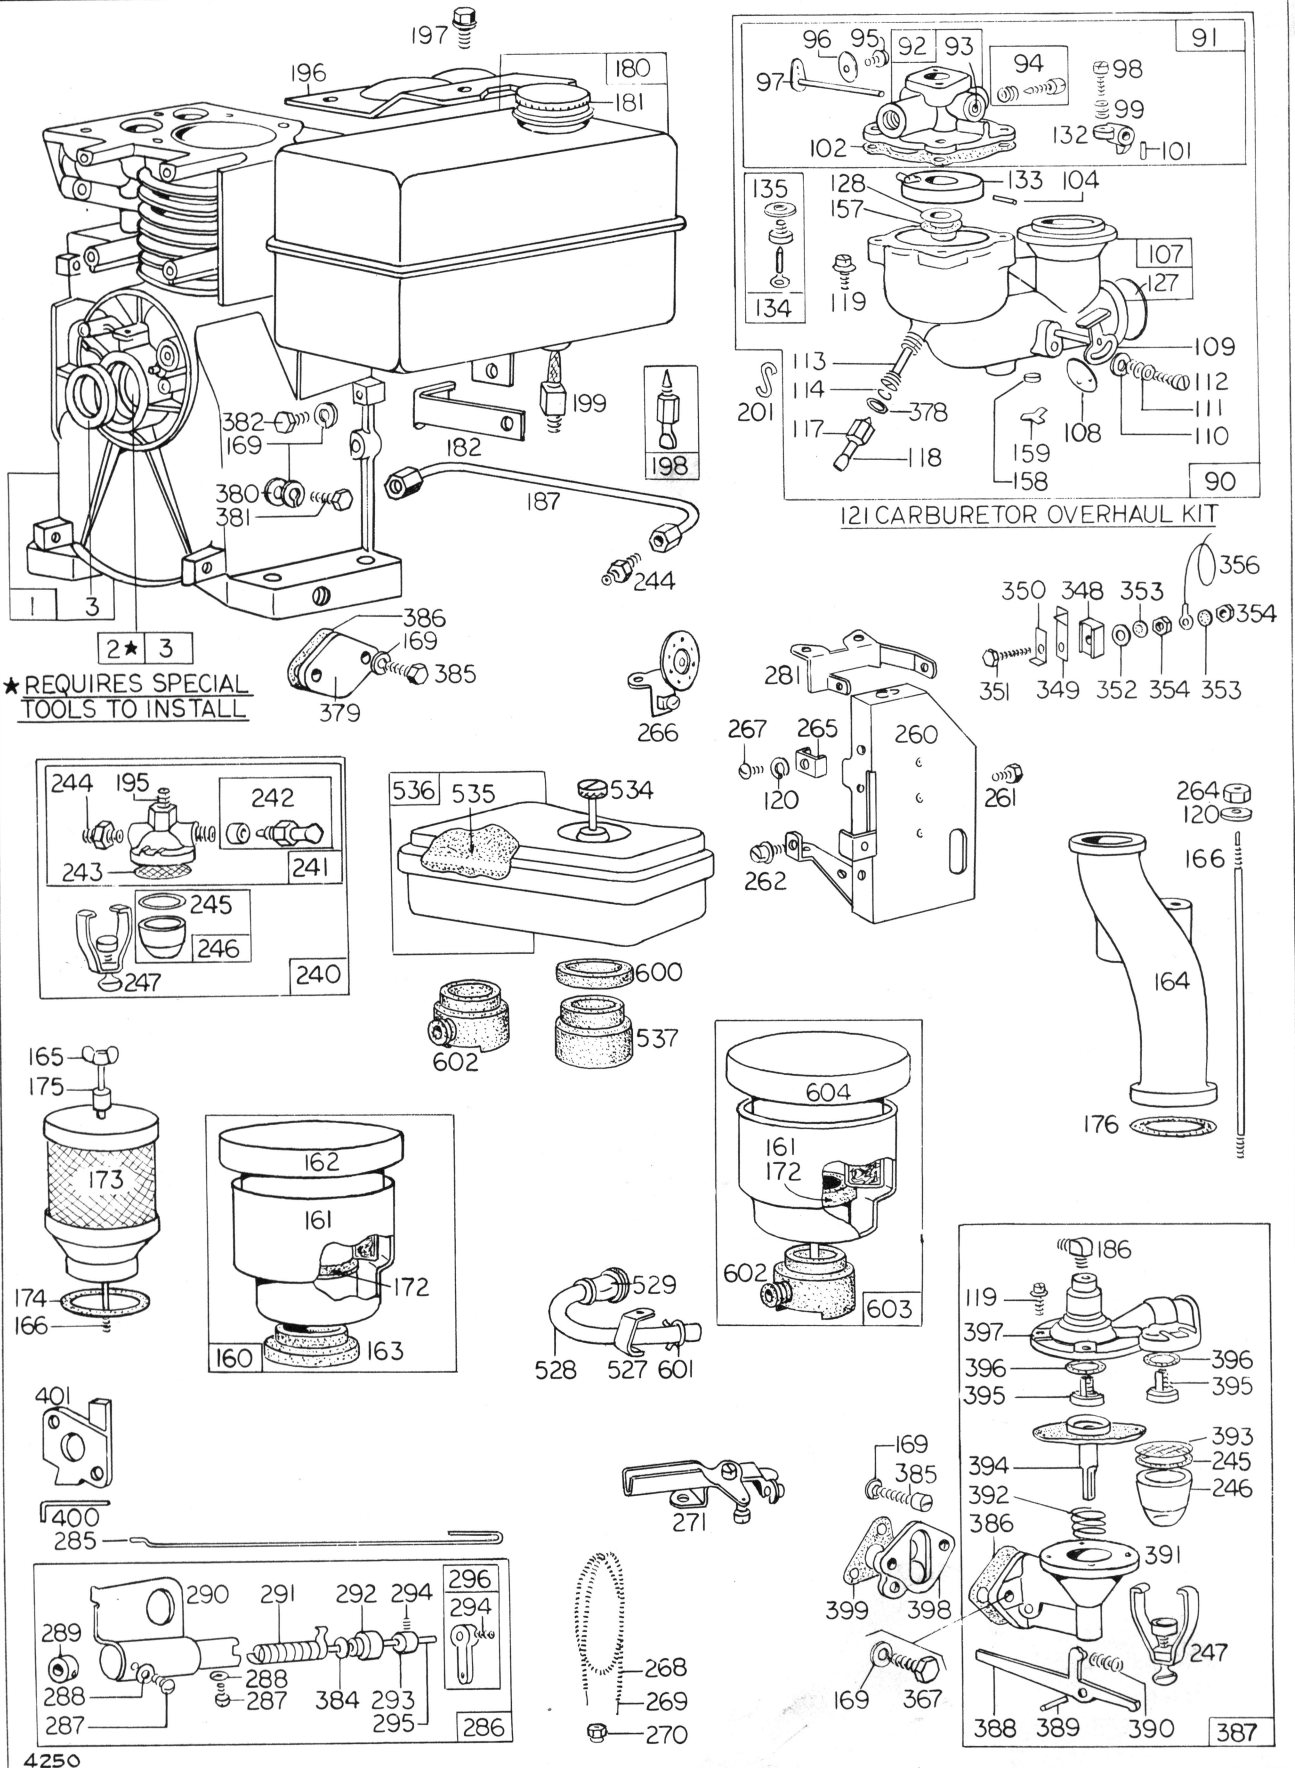

Assemblies include all parts shown in frames.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	296561	Cylinder Assembly Used on <i>Model 60300</i> , <i>60400</i> Series after Serial No. 5810030. Note: 294301 Cylinder Assy. Used on <i>Model 60300</i> , <i>60400</i> Series before Serial No. 5810060.			210624 Cylinder Head Used on the above type Nos. before Serial No. 5810060. Uses: 220863 Washer—Spacer (Between tank bracket and one boss on cylinder head) 295053 Head—Cylinder Used on type No. 942217.			Used on type No. 942534.
	296610	Cylinder Assembly Used on <i>Model 61300</i> , <i>61400</i> Series after Serial No. 5810030. Note: 295469 Cylinder Assy. Used on <i>Model 61300</i> , <i>61400</i> Series before Serial No. 5810060. 295733 Cylinder Assy. Used on type No. 942645.				15	91249	Plug—Pipe, 1/4" Std. Square Hd. Note: 92737 Plug—Oil Drain Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0248, 942217.
2	293708	Bushing—Cylinder Note: 293708 and 220538 Bushings Require special tools for installation. 220538 Bushing—Cyl. Used on type No. 942246.	6	22963	Washer—Plain	16	260271	Crankshaft Note: 260036 Crankshaft Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0027, 0120, 0140, 0158, 0165, 0166, 0171, 0177, 0178, 0192, 0208, 0227, 942015, 942021, 942031, 942034, 942036, 942042, 942052, 942061, 942072, 942073, 942077, 942107, 942146, 942151, 942166, 942173, 942179, 942186, 942202, 942203, 942241, 942249, 942275; also used on <i>Model 61300</i> , <i>61400</i> Series type Nos. 0120, 0140, 0150, 0151, 0156, 0160, 0182, 0183, 942515, 942521, 942543, 942544, 942564, 942565, 942586, 942589, 942631, 942637, 942648, 942649, 942652. 260037 Crankshaft Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0028, 0060, 0164, 0168, 0174, 0175, 0182, 0206, 0213, 0218, 0223, 0226, 942029, 942032, 942033, 942035, 942038,
3	89660	Seal—Oil	7	‡27670	Gasket—Cylinder Head Note: Two No. 27670 Gaskets are used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0182, 0200, 0208, 942074, 942095, 942096, 942117, 942151, 942174; also used on <i>Model 61300</i> , <i>61400</i> Series type Nos. 0150, 0152, 0156, 942557, 942564, 942573, 942593, 942630, 942635, 942636.			
5	210812	Head—Cylinder Note: 210209 Head—Cyl. Used on engines before Serial No. 5810060. 210623 Head—Cylinder Used after Serial No. 5810030. On <i>Model 60300</i> , <i>60400</i> Series type Nos. 0182, 0200, 0208, 942074, 942095, 942096, 942117, 942151, 942174; also used on <i>Model 61300</i> , <i>61400</i> Series type Nos. 0150, 0152, 0156, 942557, 942564, 942573, 942593, 942630, 942635, 942636.	8	294178	Breather—Valve Chamber			
			9	‡27549	Gasket—Valve Cover			
			10	93394	Screw—Breather Mounting Sem			
			11	66638	Tube—Breather			
			12	‡27586	Gasket—Crankcase— .015" thick (Standard) ‡27617 Gasket—Crankcase— .005" thick ‡27618 Gasket—Crankcase— .009" thick			
			13	91386	Screw—Cylinder Head (2" long)			
			14	92674	Screw—Cylinder Head (2-7/16" long) Note: 92985 Screw—Cylinder Head 63336 Spacer			

‡ Included in Gasket Set—
Part No. 297275.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		942046, 942047, 942053, 942054, 942075, 942083, 942096, 942124, 942142, 942147, 942149, 942182, 942188, 942190, 942191, 942207, 942237, 942240, 942245, 942269; also used on <i>Model 61300</i> , <i>61400</i> Series type Nos. 0155, 0159, 0162, 0167, 0170, 0173, 0178, 0179, 0181, 942536, 942537, 942540, 942557, 942558, 942566, 942568, 942574, 942579, 942587, 942607, 942620, 942653, 942657. 260039 Crankshaft Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0061, 0214, 0229, 0230, 0236, 0237, 942030, 942043, 942055, 942067, 942070, 942071, 942097, 942099, 942100, 942119, 942144, 942148, 942150, 942159, 942170, 942178, 942181, 942184, 942215, 942217, 942220, 942239; also used on <i>Model 61300</i> , <i>61400</i> Series type Nos. 0158, 0168, 0171, 0174, 942570, 942581, 942608, 942609, 942638, 942642, 942643, 942644.			260043 Crankshaft Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0045, 0125, 0144, 0151, 0170, 0191, 0200, 0219, 942017, 942044, 942045, 942056, 942084, 942098, 942108, 942111, 942114, 942117, 942121, 942125, 942134, 942157, 942160, 942167, 942183, 942201; also used on <i>Model 61300</i> , <i>61400</i> Series type Nos. 0144, 0165, 942517, 942538, 942571, 942575, 942578, 942590, 942605, 942627. 260100 Crankshaft Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0049, 0126, 0145, 0152, 0154, 0160, 0167, 0172, 0198, 0201, 0222, 0233, 942018, 942079, 942085, 942118, 942130, 942132, 942161, 942175, 942180, 942197, 942214, 942226, 942230, 942232, 942234, 942253, 942254, 942262; also used on <i>Model 61300</i> , <i>61400</i> Series type Nos. 0126, 0145, 0169, 0180, 942518, 942526, 942533, 942585, 942599, 942606, 942616, 942623, 942658.			260103 Crankshaft Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0121, 0141, 0179, 0197, 0211, 0238, 0247, 0250, 942016, 942022, 942041, 942101, 942106, 942177, 942192, 942200, 942212, 942213, 942219, 942224, 942270, 942271; also used on <i>Model 61300</i> , <i>61400</i> Series type Nos. 0121, 0141, 0152, 0153, 0154, 0176, 942516, 942522, 942532, 942554, 942561, 942576, 942577, 942580, 942597, 942598, 942636. 260116 Crankshaft Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0035, 0150, 0155, 0180, 0187, 0203, 0209, 0216, 0239, 0243, 0245, 0251, 942081, 942089, 942113, 942129, 942187, 942206, 942216, 942222, 942223, 942229, 942233, 942238, 942247, 942258; also used on <i>Model 61300</i> , <i>61400</i> Series type Nos. 0161, 0172, 942546, 942588, 942591, 942610, 942612, 942613, 942614, 942617, 942619, 942621, 942632, 942641.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	260118	Crankshaft Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0181, 0188, 0189, 0190, 0212, 0246, 0248, 942140, 942165, 942242, 942246, 942248, 942261; also used on <i>Model 61300</i> , <i>61400</i> Series type No. 942628.			0228, 0231, 0235, 942010, 942012, 942013, 942019, 942023, 942024, 942025, 942050, 942057, 942064, 942065, 942066, 942069, 942078, 942082, 942087, 942091, 942092, 942095, 942102, 942103, 942105, 942116, 942123, 942126, 942127, 942131, 942135, 942136, 942141, 942163, 942168, 942169, 942185, 942193, 942205, 942218, 942252, 942276; also used on <i>Model 61300</i> , <i>61400</i> Series type Nos. 0110, 0115, 0132, 0163, 0177, 942510, 942512, 942513, 942519, 942525, 942528, 942529, 942531, 942534, 942573, 942600, 942639, 942640, 942654, 942655, 942659.			Nos. 0026, 0225, 942039, 942048, 942074, 942090, 942094, 942112, 942174, 942198; also used on <i>Model</i> <i>61300</i> , <i>61400</i> Series type Nos. 0157, 942583, 942604, 942626, 942630, 942651.
	260180	Crankshaft Used on type No. 942622.						260494 Crankshaft Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0156, 0159, 942040, 942068, 942086, 942133, 942164, 942189, 942243, 942244, 942259, 942263; also used on <i>Model</i> <i>61300</i> , <i>61400</i> Series type Nos. 942553, 942572, 942582, 942592, 942593, 942615, 942618, 942625.
	260196	Crankshaft Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0025, 942037, 942221; also used on <i>Model 61300</i> type No. 942539.						260495 Crankshaft Used on <i>Model 60300</i> Series type No. 0244; also used on <i>Model</i> <i>61300</i> , <i>61400</i> Series type Nos. 0175, 942541.
	260248	Crankshaft Used on type No. 942204.						260496 Crankshaft Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0029, 942059; also used on <i>Model</i> <i>61300</i> Series type No. 942555.
	260265	Crankshaft Used on type No. 942645.						260528 Crankshaft Used on type No. 942584.
	260266	Crankshaft Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0161, 942049, 942143, 942274; also used on <i>Model 61300</i> Series type No. 942624.						
	260272	Crankshaft Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0010, 0050, 0110, 0115, 0132, 0162, 0163, 0166, 0169, 0176, 0185, 0193, 0202, 0215,						

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		Used on <i>Model 60300, 60400</i> Series after Serial No. 5810030. Note: 293400 Piston Assy. — Standard (for 2-5/16" Bore) Used on <i>Model 60300, 60400</i> Series before Serial No. 5810060. 295455 Piston Assy. — Standard (for 2-3/8" Bore) Used on <i>Model 61300, 61400</i> Series after Serial No. 5810030. 295479 Piston Assy. — Standard (for 2-5/16" Bore) Used on <i>Model 61300, 61400</i> Series before Serial No. 5810060. 295588 Piston Assembly— .010" O. S. (for 2-3/8" Bore) Used on <i>Model 60300, 60400</i> Series after Serial No. 5810030. Note: 293401 Piston Assy. — .010" O. S. (for 2-5/16" Bore) Used on <i>Model 60300, 60400</i> Series before Serial No. 5810060. 295456 Piston Assy. — .010" O. S. (for 2-3/8" Bore) Used on <i>Model 61300, 61400</i> Series after Serial No. 5810030. 295480 Piston Assy. — .010" O. S. (for 2-5/16" Bore) Used on <i>Model 61300, 61400</i> Series before Serial No. 5810060.	20	89660 Seal—Oil Note: 293740 Seal—Oil Used on Model 60331, 60332, 60431, 60432, 61331, 61431, 61432 Series. 294207 Oil Seal and Spacer Used on Model 60311, 60312, 60401, 60402, 61401, 61402 Series. 21 66768 Plug—Oil Filler 22 93032 Screw—Crankcase Cover Mounting Sem Note: 92747 Screw—Crankcase Cover Mounting Sem Used in two top holes to mount cover on Model 60311, 60312, 60351, 60352, 60401, 60402, 61311, 61312, 61351, 61352, 61353, 61401, 61402 Series. 23 296884 Flywheel Assembly Used on and after Serial No. 6212310. Note: 297949 Flywheel Assembly Used on <i>Model 60300</i> Series type Nos. 0188, 0189, 0190. 23A 295936 Flywheel Assembly (Used before Serial No. 6212310) Note: 293205 Flywheel Assembly Used before Serial No. 6212310 on type Nos. 942165, 942239, 942246, 942248. 24 61760 Key—Flywheel 25 295587 Piston Assembly—Std. (for 2-3/8" Bore)	260664 Crankshaft Used on type No. 0249. 260848 Crankshaft Used on <i>Model 60300</i> Series type Nos. 0210, 0221. 17 99158 Bearing—Ball 18 294305 Cover Assembly—Crankcase Used on Model 60301, 60302, 61301, 61302, 61303 Series. Note: 294306 Cover Assy. —Crankcase Used on Model 60331, 60332, 60431, 60432, 61331, 61332, 61431, 61432 Series. 294307 Cover Assy. —Crankcase Used on Model 60311, 60312, 60351, 60352, 60401, 60402, 61311, 61312, 61351, 61352, 61353, 61401, 61402 Series. 19 293708 Bushing—Crankcase Cover Note: Parts 220538, 293708 and 294499 require special tools for installation. Note: 220538 Bushing—Crankcase Cover Used on Model 60311, 60312, 60351, 60352, 61311, 61312, 61351, 61352, 61353 Series. 294499 Bushing Assy. —Crankcase Cover Used on Model 60401, 60402, 61401, 61402 Series.			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	295589	Piston Assembly— .020" O. S. (for 2-3/8" Bore) Used on <i>Model 60300</i> , <i>60400</i> Series after Serial No. 5810030.			MODEL SERIES 60300, 60400 PISTON RING SETS:			consists of:
	Note:	293402 Piston Assy. — .020" O. S. (for 2-5/16" Bore) Used on <i>Model 60300</i> , <i>60400</i> Series before Serial No. 5810060.			Note: For Chrome Piston Ring Set for 2-3/8" bore—Standard Size— order Part No. 297201.			210361 Ring, Piston, Compression, Top, .010" O. S.
		295457 Piston Assy. — .020" O. S. (for 2-3/8" Bore) Used on <i>Model 61300</i> , <i>61400</i> Series after Serial No. 5810030.	26	294232	Ring Set—Std. Piston Used on Model 60300, 60400 Series after Serial No. 5810030, consists of:		294225	210362 Ring, Piston Compression, Center .010" O. S.
		295481 Piston Assy. — .020" O. S. (for 2-5/16" Bore) Used on <i>Model 61300</i> , <i>61400</i> Series before Serial No. 5810060.			210471 Ring, Piston, Comp., Top			210363 Ring, Piston, Oil, .010" O. S.
	295590	Piston Assembly— .030" O. S. (for 2-3/8" Bore) Used on <i>Model 60300</i> , <i>60400</i> Series after Serial No. 5810030.			Note: 293506 Ring Set— Standard Piston Used on Model 60300, 60400 Series before Serial No. 5810060, consists of:			Ring Set—.020" O. S. Piston Used on Model 60300, 60400 Series after Serial No. 5810030, consists of:
	Note:	293403 Piston Assy. — .030" O. S. (for 2-5/16" Bore) Used on <i>Model 60300</i> , <i>60400</i> Series before Serial No. 5810060.			210222 Ring, Piston, Compression, Top, Standard.			210493 Ring, Piston, Compression, Top, .020" O. S.
		295458 Piston Assy. — .030" O. S. (for 2-3/8" Bore) Used on <i>Model 61300</i> , <i>61400</i> Series after Serial No. 5810030.			210223 Ring, Piston, Compression, Center, Standard			210492 Ring, Piston, Compression, Center, .020" O. S.
		295482 Piston Assy. — .030" O. S. (for 2-5/16" Bore) Used on <i>Model 61300</i> , <i>61400</i> Series before Serial No. 5810060.		294224	Ring Set—.010" O. S. Piston Used on Model 60300, 60400 Series after Serial No. 5810030, consists of:		Note:	210494 Ring, Piston, Oil, .020" O. S.
					210224 Ring, Piston, Oil, Standard			293508 Ring Set— .020" O. S. Piston Used on Model 60300, 60400 Series before Serial No. 5810060, consists of:
					210490 Ring, Piston, Compression, Top, .010" O. S.			210364 Ring, Piston, Compression, Top, .020" O. S.
					210489 Ring, Piston, Compression, Center, .010" O. S.			210365 Ring, Piston, Compression, Center, .020" O. S.
					210491 Ring, Piston, Oil, .010" O. S.			210366 Ring, Piston, Oil, .020" O. S.
				Note:	293507 Ring Set— .010" O. S. Piston Used on Model 60300, 60400 Series before Serial No. 5810060,		294226	Ring Set—.030" O. S. Piston Used on Model 60300, 60400 Series after Serial No. 5810030, consists of:
								210496 Ring, Piston, Compression, Top, .030" O. S.
								210495 Ring, Piston, Compression, Center, .030" O. S.
								210497 Ring, Piston, Oil, .030" O. S.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		<p>Note: 293509 Ring Set— .030" O.S. Piston Used on Model 60300, 60400 Series before Serial No. 5810060, consists of: 210367 Ring, Piston, Compression, Top, .030" O.S. 210368 Ring, Piston, Compression, Center, .030" O.S. 210369 Ring, Piston, Oil, .030" O.S.</p> <p>MODEL SERIES 61300, 61400 PISTON RING SETS:</p> <p>Note: For Chrome Piston Ring Set for 2-3/8" bore— standard size—order Part No. 297201</p> <p>295657 Ring Set—Std. Piston Used on Model 61300, 61400 Series after Serial No. 5810030. consists of: 210796 Ring, Piston, Compression, Top, Standard 210797 Ring, Piston, Compression, Center, Standard 295661 Ring, Oil (with expander), Standard</p> <p>Note: 295649 Ring Set— Standard Piston Used on Model 61300, 61400 Series before Serial No. 5810060, consists of: 210788 Ring, Piston, Compression, Top, Standard 210789 Ring, Piston, Compression, Center, Standard 295653 Ring, Oil (with expander), Standard</p> <p>295658 Ring Set—.010" O.S. Piston</p>			<p>Used on Model 61300, 61400 Series after Serial No. 5810030, consists of: 210799 Ring, Piston, Compression, Top, .010" O.S. 210798 Ring, Piston, Compression, Center, .020" O.S. 295662 Ring, Oil (with expander), .010" O.S.</p> <p>Note: 295650 Ring Set— .010" O.S. Piston Used on Model 61300, 61400 Series before Serial No. 5810060, consists of: 210790 Ring, Piston, Compression, Top, .010" O.S. 210791 Ring, Piston, Compression, Center, .010" O.S. 295654 Ring, Oil (with expander), .010" O.S.</p> <p>295659 Ring Set—.020" O.S. Piston Used on Model 61300, 61400 Series after Serial No. 5810030, consists of: 210801 Ring, Piston Compression, Top, .020" O.S. 210800 Ring, Piston, Compression, Center, .020" O.S. 295663 Ring, Oil (with expander), .020" O.S.</p> <p>Note: 295651 Ring Set— .020" O.S. Used on Model 61300, 61400 Series before Serial No. 5810060, consists of: 210792 Ring, Piston, Compression, Top, .020" O.S.</p>			<p>210793 Ring, Piston, Compression, Center, .020" O.S. 295655 Ring, Oil (with expander), .020" O.S.</p> <p>295660 Ring Set—.030" O.S. Piston Used on Model 61300, 61400 Series after Serial No. 5810030, consists of: 210803 Ring, Piston, Compression, Top, .030" O.S. 210802 Ring, Piston, Compression, Center, .030" O.S. 295664 Ring, Oil (with expander), .030" O.S.</p> <p>Note: 295652 Ring Set— .030" O.S. Used on Model 61300, 61400 Series before Serial No. 5810060, consists of: 210794 Ring, Piston, Compression, Top, .030" O.S. 210795 Ring, Piston, Compression, Center, .030" O.S. 295656 Ring, Oil (with expander), .030" O.S.</p> <p>27 26026 Lock—Piston Pin 28 298909 Pin Assembly—Piston— Standard 298908 Pin Assembly—Piston— .005" O.S. 29 294300 Rod Assembly— Connecting 30 220459 Dipper—Conn. Rod 31 220460 Lock—Connecting Rod Screw 32 92296 Screw—Connecting Rod 33 296676 Valve—Exhaust (Grooved Stem— Includes Retainer No. 93312)</p> <p>Note: 26973 Valve—Exhaust (With Hole in Stem)</p>

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		For Pins and Retainers for this valve see note under reference number 40. Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0026, 0027, 0028, 0035, 0060, 0061, 0156, 0193, 942040, 942099, 942181, 942189, 942243, also used on <i>Model 61300</i> , <i>61400</i> Series type Nos. 0165, 0174, 0179, 942572, 942577, 942589, 942590, 942592, 942593, 942625, 942645. 260075 Valve— Exhaust, Stellite (With Hole in Stem) For Pins and Retainers for this valve see note under reference number 40. Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0013, 0014, 0016, 0159, 0161, 0188, 0189, 0190, 0203, 0206, 0210, 0225, 0226, 0227, 0229, 0237, 0238, 0248, 0249, 942049, 942062, 942072, 942101, 942109, 942143, 942152, 942154, 942155, 942162, 942165, 942170, 942184, 942217, 942239, 942244, 942246, 942248, 942263, 942274; also used on <i>Model 61300</i> , <i>61400</i> Series type Nos. 0182, 942535, 942547, 942559, 942562,			942602, 942603, 942618, 942624, 942644. 34 296677 Valve—Intake (Grooved Stem—Includes Retainer No. 93312) Note: 23386 Valve—Intake (with Hole in Stem) Used on engines before Serial No. 5810060. 230101 Valve—Intake (with Hole in Stem) For Pins and Retainers for this valve and Part No. 23386 see note under reference number 40. Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0013, 0014, 0016, 0159, 0161, 0188, 0189, 0190, 0203, 0206, 0210, 0225, 0226, 0227, 0229, 0237, 0238, 0248, 0249, 942049, 942062, 942072, 942101, 942109, 942143, 942152, 942154, 942155, 942162, 942165, 942170, 942184, 942217, 942239, 942244, 942246, 942248, 942263, 942274; also used on <i>Model 61300</i> , <i>61400</i> Series type Nos. 0182, 942535, 942547, 942559, 942562, 942602, 942603, 942618, 942624, 942644. 35 260552 Spring—Intake Valve 36 26478 Spring—Exhaust Valve Note: 26826 Spring—Exhaust Valve			Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0013, 0014, 0026, 0027, 0028, 0035, 0060, 0061, 0156, 0159, 0161, 0188, 0189, 0190, 0203, 0206, 0210, 0221, 0225, 0226, 0227, 0229, 0237, 0238, 0248, 0249, 942040, 942049, 942062, 942072, 942099, 942101, 942143, 942152, 942154, 942155, 942165, 942170, 942181, 942184, 942189, 942217, 942239, 942243, 942246, 942248, 942263, 942274, also used on <i>Model</i> <i>61300</i> , <i>61400</i> Series type Nos. 0165, 0174, 0179, 0182, 942535, 942547, 942572, 942577, 942589, 942590, 942592, 942593, 942624, 942625, 942644, 942645. 40 93312 Retainer—Valve Spring Used with valves with groove in stem. Note: 23184 Retainer—Valve Spring 23187 Pin—Valve Spring Retainer Used with valves with hole in stem, except those with Rotocap. 292259 Rotocap— Exhaust Valve Uses: 230126 Pin— Exhaust Valve Rotocap Retainer 230127 Retain- er—Exhaust Valve Rotocap

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0013, 0014, 0026, 0027, 0028, 0035, 0060, 0061, 0156, 0159, 0161, 0188, 0189, 0190, 0203, 0206, 0210, 0221, 0225, 0226, 0227, 0229, 0237, 0238, 0248, 0249, 942040, 942049, 942062, 942072, 942099, 942101, 942143, 942152, 942154, 942155, 942165, 942170, 942181, 942184, 942189, 942217, 942239, 942243, 942246, 942248, 942263, 942274; also used on <i>Model 61300</i> , <i>61400</i> Series type Nos. 0165, 0174, 0179, 0182, 942535, 942547, 942572, 942577, 942589, 942590, 942592, 942593, 942624, 942625, 942644, 942645.			Note: 93170 Screw—Intake Elbow Mounting Sem 93028 Washer—Lock— Shakeproof No. 1114-00 Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 942144, 942148; also used on <i>Model</i> <i>61300</i> , <i>61400</i> Series type No. 942609.			291230 Starter Assy. — Foot Uses: 89363 Sector 99632 Tooth— Spring 26025 Spring— Pedal Return Used on type Nos. 0014, 942155.
			56	298738	Pulley—Rewind Starter Used after Serial No. 6506301.	67	211383	Housing—Starter Clutch Used after Serial No. 6405220.
				Note: 294088 Pulley— Rewind Starter Used before Serial No. 6507011.			Note: 210400 Housing— Starter Clutch Used before Serial No. 6405250.	
			57	294303	Spring—Rewind Starter			Note: 291017 Housing— Starter Clutch
			58	66694	Rope—Starter— 47-1/8" Long Used after Serial No. 6506301.			Uses: 91758 Screw— Set Used on type Nos. 0014, 942155.
				Note: 294584 Rope—Starter— 47-1/8" Long Used before Serial No. 6507011.	68	63770	Ball—Clutch	
				Note: If longer rope is needed, order No. 66684 (used after Serial No. 6506301) or No. 66514 (used before Serial No. 6507011) and cut to required length.	70	298436	Ratchet—Rewind and Wind-up Starter Used after Serial No. 6405220.	
			59	230228	Pin—Starter Grip			Note: 296597 Ratchet— Rewind and Wind-up Starter Used before Serial No. 6405250.
45	230173	Tappet—Valve	60	66728	Grip—Starter Rope			23388 Ratchet—Foot Starter Used on type Nos. 0014, 942155.
46	210453	Gear—Cam	61	68618	Pumper—Starter Pulley	71	221653	Washer—Clutch Retainer Used after Serial No. 6405220.
50	210201	Elbow—Intake	66	298310	Clutch Assy. —Rewind and Wind-up Starter Used after Serial No. 6405220.			Note: 221301 Washer—Clutch Retainer (Used with square shank ratchet) Used before Serial No. 6405250.
51	† 68987	Gasket—Carburetor Mounting			Note: 296468 Clutch Assy. — Rewind and Wind-up Starter Used before Serial No. 6405250.			220575 Washer—Clutch Retainer (Used with 7 point shank ratchet)
52	† 27355	Gasket—Intake Elbow Mounting			290221 Clutch Assy. — Starter			
		Note: 27384 Gasket—Intake Elbow Mounting Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 942144, 942148; also used on <i>Model</i> <i>61300</i> , <i>61400</i> Series type No. 942609.						
53	93357	Screw—Carburetor and Intake Elbow Mtg. Sem						

† Included in Carburetor Overhaul Kit—
Part No. 291691.

† Included in Gasket Set—
Part No. 297275.

13

† Included in Carburetor Overhaul Kit—
Part No. 291691.

‡ Included in Gasket Set—
Part No. 297275.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		22182 Washer—Clutch Retainer Used on type Nos. 0014, 942155.	86	291730	Cover Assembly—Gear Case			0133, 0140, 0141, 0144, 0145, 0154, 0158, 0168, 0171, 0173, 0174, 0178, 942519, 942520, 942521, 942522, 942570, 942581, 942591, 942596, 942598, 942607, 942608, 942614, 942615, 942616, 942628, 942629, 942638, 942642, 942643, 942644, 942645.
72	26032	Spring—Clutch Retainer Used before Serial No. 6405250.	87	19011	Seal—Oil			
73	221661	Screen—Rotating Used after Serial No. 6405220.	88	27313	Gasket—Gear Case Cover			
	Note:	220648 Screen—Starter Pulley Used before Serial No. 6405250.	89	93448	Plug—Headless, 1/4" Pipe Thread (Used after Serial No. 6304170)			
74	93490	Screw—Rotating Screen Mounting Sem		Note:	92015 Plug—Headless (Used before Serial No. 6304180)			
75	220865	Washer—Spring (Used to lock windup and rewind starter clutch)			91488 Plug—Pipe, 1/8" Square Head Used on type No. 942526.			294089 Carburetor Assy. (Mechanical Governor—Kerosene) Used on <i>Model 60400</i> Series type No. 942170.
76	68238	Washer—Ratchet Sealing Used after Serial No. 6405220.	90	294311	Carburetor Assembly (Manual Choke)			294456 Carburetor Assy. (Remote Choke) Used on <i>Model 60300</i> Series type Nos. 0013, 942152, 942155.
78	93014	Screw—Pulley Screen Mounting Sem		Note:	294075 Carburetor Assy. (Manual Choke—Mechanical Governor) Used on <i>Model 60400</i> Series type Nos. 0050, 0060, 0061, 0132, 0133, 0140, 0141, 0144, 0145, 0163, 0212, 0230, 0236, 0237, 0246, 0247, 0248, 942019, 942020, 942021, 942022, 942043, 942054, 942055, 942067, 942070, 942071, 942089, 942097, 942099, 942119, 942136, 942140, 942150, 942159, 942181, 942184, 942211, 942213, 942215, 942217, 942220, 942233, 942261; also used on <i>Model 61400</i> Series type Nos. 0132,			294607 Carburetor Assy. (Mechanical Governor—Automatic Choke) Used on <i>Model 60400</i> Series type Nos. 942144, 942148; also Used on <i>Model 61400</i> Series type No. 942609.
79	290779	Case Assembly—Gear						294671 Carburetor Assy. (Kerosene) Used on <i>Model 60300</i> Series type Nos. 0182, 0200, 0208, 0214, 0229, 942074, 942095, 942096, 942117, 942151, 942174; also used on <i>Model 61300</i> Series type Nos. 0150, 0152, 0156, 942557, 942564,
80	27667	Gasket—Gear Case						
81	220234	Lock—Gear Case Mounting Sem						
82	91541	Screw—Cap, Hex. Hd.—5/16-24 x 7/8"						
	Note:	Use: 92279 Screw, Cap, Hex. Hd.—5/16-24 x 1-1/2" on inside of gear case to mount same to crank-case.						
82A	92279	Screw—Cap. Hex. Hd.—5/16-24 x 1/2"						
83	211293	Shaft Assy.—Drive						
	Note:	Order—Shaft Assy.—Drive Used on type Nos. 942111, 942201. From the equipment manufacturer.						
84	92617	Plug—Breather						
85	92747	Screw—Gear Case Mounting Sem						

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		942573, 942593, 942630, 942635, 942636. 295613 Carburetor Assy. (L. P. Gas) Used on <i>Model 60300</i> Series type Nos. 0193, 942062, 942162, 942244; also used on <i>Model 61300</i> Series type Nos. 942559, 942602, 942618. 296108 Carburetor Assy. (Remote Choke— Mechanical Governor) Used on <i>Model 60400</i> Series type Nos. 0188, 0189, 0190, 942165, 942239, 942246, 942248. 297031 Carburetor Assy. (Choke-A-Matic) Used on <i>Model 60300</i> Series type Nos. 0173, 0183, 0184, 0196, 0207, 0217, 0242, 942231, 942265, 942266, 942267, 942273; also used on <i>Model 61300</i> Series type Nos. 942646, 942647, 942650, 942656. 297914 Carburetor Assy. (Choke-A-Matic) Used on <i>Model 60300</i> Series type Nos. 0194, 942256.			0163, 0188, 0189, 0190, 0212, 0230, 0236, 0237, 0246, 0247, 0248, 942019, 942020, 942021, 942022, 942043, 942054, 942055, 942067, 942070, 942071, 942089, 942097, 942099, 942119, 942136, 942140, 942144, 942148, 942150, 942159, 942165, 942170, 942181, 942184, 942211, 942213, 942215, 942217, 942220, 942233, 942239, 942246, 942248, 942261; also used on <i>Model 61400</i> Series type Nos. 0132, 0133, 0140, 0141, 0144, 0145, 0154, 0158, 0168, 0171, 0173, 0174, 0178, 942519, 942520, 942521, 942522, 942570, 942581, 942591, 942596, 942598, 942607, 942608, 942609, 942614, 942615, 942616, 942628, 942629, 942638, 942642, 942643, 942644, 942645. 298146 Housing Assy.—Throttle Used on <i>Model 60300</i> Series type Nos. 0173, 0183, 0184, 0194, 0196, 0207, 0217, 0242, 942231, 942256, 942265, 942266, 942267, 942273; also			used on <i>Model 61300</i> Series type Nos. 942646, 942647, 942650, 942656. 92 99634 Body—Upper Carburetor 93 23230 Bushing—Throttle Shaft 94 292681 Valve Assembly— Carburetor Idle 95 93038 Screw—Throttle Valve Mounting Sem 96 22036 Valve—Throttle 97 293907 Shaft and Lever— Throttle Note: 99868 Shaft and Lever— Throttle (Mechanical Governor) Used on <i>Model 60400</i> Series type Nos. 0050, 0060, 0061, 0132, 0133, 0140, 0141, 0144, 0145, 0163, 0188, 0189, 0190, 0212, 0230, 0236, 0237, 0246, 0247, 0248, 942019, 942020, 942021, 942022, 942043, 942054, 942055, 942067, 942070, 942071, 942089, 942097, 942099, 942119, 942136, 942140, 942144, 942148, 942150, 942159, 942165, 942170, 942181, 942184, 942211, 942213, 942215, 942217, 942220, 942233, 942239, 942246, 942248, 942261; also used on <i>Model 61400</i> Series type Nos. 0132, 0133, 0140, 0141, 0144, 0145, 0154, 0158, 0168, 0171, 0173, 0174,
91	294312	Housing Assembly— Throttle Note: 89495 Housing Assy.— Throttle (Mechanical Governor) Used on <i>Model 60400</i> Series type Nos. 0050, 0060, 0061, 0132, 0133, 0140, 0141, 0144, 0145,						

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		0178, 942519, 942520, 942521, 942522, 942570, 942581, 942591, 942596, 942598, 942607, 942608, 942609, 942614, 942615, 942616, 942628, 942629, 942638, 942642, 942643, 942644, 942645, 296988 Shaft and Lever—Throttle Used on <i>Model 60300</i> Series type Nos. 0173, 0183, 0184, 0194, 0196, 0207, 0217, 0242, 942231, 942256, 942265, 942266, 942267, 942273; also used on <i>Model 61300</i> Series type Nos. 942646, 942647, 942650, 942656.			Used on <i>Model 60400</i> Series type Nos. 942144, 942148; also used on <i>Model 61400</i> Series type No. 942609. 297032 Body Assembly—Carburetor Used on <i>Model 60300</i> Series type Nos. 0173, 0183, 0184, 0196, 0207, 0217, 0242, 942231, 942265, 942266, 942267, 942273, also used on <i>Model 61300</i> Series type Nos. 942646, 942647, 942650, 942656. 297915 Body Assembly—Carburetor Used on <i>Model 60300</i> Series type Nos. 0194, 942256.			used on <i>Model 61400</i> Series type No. 942609. Uses: 93038 Screw (for mounting) Shaft and Lever Assy.—Choke Note: 291061 Shaft and Lever Assy.—Choke Uses: 26228 Spring— Return Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0013, 0188, 0189, 0190, 942152, 942155, 942165, 942239, 942246, 942248. 294489 Shaft, Lever and Vane Assembly— Automatic Choke Uses: 291040 Lever and Weight Assembly Includes: 90200 Screw (for mount- ing) Used on <i>Model 60400</i> Series type Nos. 942144, 942148; also used on <i>Model 61400</i> Series type No. 942609. 295574 Shaft—Choke Used on <i>Model 60300</i> Series type Nos. 0173, 0183, 0184, 0194, 0196, 0207, 0217, 0242, 942265, 942266, 942267, 942273; also used on <i>Model 61300</i> Series type Nos. 942646, 942647, 942650, 942656.
98	91920	Screw—Machine, Fill. Hd. — 8-32 x 5/8"	108	220897	Valve—Choke	109	294874	
			Note:	22050 Valve—Choke (with hole) Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0013, 0173, 0183, 0184, 0188, 0189, 0194, 0196, 0207, 0217, 0242, 942152, 942155, 942165, 942231, 942239, 942246, 942248, 942256, 942265, 942266, 942267, 942273; also used on <i>Model 61300</i> , <i>61400</i> Series type Nos. 942646, 942647, 942650, 942656. Uses: 93038 Screw (for mounting) 22876 Valve—Choke (with holes) Used on <i>Model 60400</i> Series type Nos. 942144, 942148; also				
99	† 26157	Spring—Throttle Adjustment						
101	93043	Pin—Throttle Stop and Gov. Shaft						
102	† 27917	Gasket—Carburetor Body						
104	† 23114	Pin—Float Hinge						
107	293515	Body Assembly— Carburetor						
	Note:	294431 Body Assembly—Carburetor Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0013, 0188, 0189, 0190, 942152, 942155, 942165, 942239, 942246, 942248. 294608 Body Assembly—Carburetor				110	220899	Washer—Choke Lever
						111	26229	Spring—Choke Lever
							Note:	260396 Spring—Choke Return

† Included in Carburetor Overhaul Kit—
Part No. 291691.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		Used on <i>Model 60300</i> Series type Nos. 0173, 0183, 0184, 0194, 0196, 0207, 0217, 0242, 942231, 942256, 942265, 942266, 942267, 942273; also used on <i>Model 61300</i> Series type Nos. 942646, 942647, 942650, 942656.			0194, 0196, 0207, 0217, 0242, 942231, 942256, 942265, 942266, 942267, 942273; also used on <i>Model 61300</i> Series type Nos. 942646, 942647, 942650, 942656.			165 92067 Nut—Wing 166 230238 Stud—Air Cleaner Note: 63949 Stud—Air Cleaner Used on <i>Model 60300</i> Series type Nos. 0173, 0183, 0184, 0194, 0196, 0207, 0217, 0242, 942256, 942265, 942266, 942267, 942273; also used on <i>Model 61300</i> Series type No. 942656. 230519 Stud—Air Cleaner Used on <i>Model 61300</i> Series type No. 942526. 230361 Stud—Air Cleaner 230408 Spacer—Air Cleaner Used on <i>Model 60400</i> Series type Nos. 942165, 942170; also used on <i>Model 61300</i> Series type No. 942551.
112	23270	Screw—Choke Lever	133	293477	Float—Carburetor			
113	† 23222	Nozzle—Carburetor	134	† 293478	Valve and Seat—Fuel Inlet			
114	† 68887	Packing—Needle Valve	135	68877	Gasket—Fuel Inlet Valve Seat			
117	† 23227	Nut—Needle Valve Packing	157	68897	Gasket—Venturi			
118	230005	Valve—Needle	158	27590	Filter—Carburetor Drain			
	Note:	292088 Valve—Needle Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0182, 0200, 0208, 0214, 0229, 942074, 942095, 942096, 942117, 942151, 942170, 942174; also used on <i>Model 61300</i> , <i>61400</i> Series type Nos. 0150, 0152, 0156, 942557, 942564, 942573, 942593, 942630, 942635, 942636.	159	220521	Retainer—Carburetor Drain Filter			
			160	294868	Cleaner Assembly— Air (with mounting stud)			
				Note:	293517 Cleaner Assy.—Air (without mounting stud) Used on type No. 942535. Uses: 230238 Stud 92067 Nut— Wing 296098 Cleaner—Air Used on type No. 942170.			169 90832 Washer—Lock— 1/4 x 3/32 x 5/64" Note: 92778 Washer—Lock (Shakeproof) Used to mount tank to bracket on <i>Model</i> <i>60300</i> , <i>60400</i> Series type Nos. 942152, 942155, 942170, 942193.
119	93347	Screw—Throttle Housing and Fuel Pump Head Mounting Sem	161	293991	Bowl—Air Cleaner			
120	92290	Washer—Lock— No. 10 x 1/16 x 3/64"	162	294863	Cover and Filter— Air Cleaner (with mounting stud)			
121	291691	Carburetor Overhaul Kit		Note:	292037 Cover and Filter—Air Cleaner (without mounting stud) Used on type No. 942535.			172 27795 Gasket—Air Cleaner 173 99395 Arrestor—Flame 174 27423 Gasket—Flame Arrestor Mounting
127	220352	Plug—Welch	163	‡ 27660	Gasket—Air Cleaner Mounting			175 23215 Spacer—Flame Arrestor 176 27603 Gasket—Air Cleaner Elbow
128	21216	Venturi—Carburetor		Note:	27603 Gasket—Air Cleaner Mounting Used on type No. 942170.			180 292944 Tank Assembly—Fuel (2 Qt.)
132	61967	Stop—Throttle Lever						
	Note:	295804 Stop—Throttle Lever Used on <i>Model 60300</i> Series type Nos. 0173, 0183, 0184,	164	210534	Elbow—Air Cleaner			

Included in Carburetor Overhaul Kit—
Part No. 291691.

‡ Included in Gasket Set—
Part No. 297275.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		Note: Fuel Tank used on <i>Model 60300, 60400</i> Series type Nos. 942062, 942162, 942170, 942217; also used on <i>Model 61300, 61400</i> Series type Nos. 942559, 942591, 942602, 942608 is supplied by equipment manufacturer.			230318 Connector—Fuel Pipe Used on <i>Model 60300, 60400</i> Series type Nos. 0169, 0195, 0231, 942038, 942144, 942150, 942255, 942260; also used on <i>Model 61400</i> Series type Nos. 942609, 942642.			The following pipes and fittings are used on <i>Model 60300, 60400</i> Series type Nos. 0182, 0200, 0208, 942074, 942095, 942096, 942117, 942151, 942174; also used on <i>Model 61300, 61400</i> Series type Nos. 0150, 0152, 0156, 942557, 942564, 942573, 942593, 942630, 942635, 942636.
		292945 Tank Assembly—Fuel (3 Qt.) Used on <i>Model 60300, 60400</i> Series type Nos. 0025, 0154, 0195, 0226, 0230, 0241, 942032, 942034, 942037, 942038, 942043, 942067, 942070, 942085, 942094, 942118, 942122, 942141, 942144, 942150, 942202, 942216, 942220, 942236, 942251, 942257, 942261; also used on <i>Model 61300, 61400</i> Series type Nos. 0160, 0163, 0174, 0178, 942531, 942539, 942551, 942560, 942565, 942569, 942570, 942584, 942609, 942617, 942632, 942637, 942638, 942642, 942654.	187	293672	Pipe—Fuel Note: 89663 Pipe—Fuel Used on type No. 942108. 99738 Pipe—Fuel Used on <i>Model 60300</i> Series type Nos. 0214, 0229, 942178. 291128 Pipe—Fuel—13-1/4" long Used on type No. 942114. 294323 Pipe—Fuel Used on <i>Model 60300, 60400</i> Series type Nos. 0025, 942032, 942034, 942037, 942043, 942094, 942122, 942202; also used on <i>Model 61300, 61400</i> Series type Nos. 0160, 0171, 0178, 942539, 942565, 942569, 942570, 942584, 942617, 942632, 942637. 294393 Pipe—Fuel Used on <i>Model 60300</i> Series type Nos. 0204, 942102, 942121, 942161, 942196; also used on <i>Model 61300</i> Series type Nos. 942549, 942561, 942563.			294530 Pipe—Fuel (short) 294531 Pipe—Fuel (long) 292486 Wing Plug, Chain and Clip Assy. 99511 Tee (Imperial Brass Co. No. 72-F) 92713 Coupling 294553 Pipe—Fuel Used on type No. 942148. 294604 Pipe—Fuel Used on <i>Model 60300, 60400</i> Series type Nos. 0230, 942045, 942046, 942087; also used on <i>Model 61300, 61400</i> Series type Nos. 0162, 0170, 942568, 942571, 942578, 942579, 942659. 294725 Pipe—Fuel Used on type No. 942645. 295050 Pipe—Fuel Uses: 230317 Connector (at tank valve)
181	69221	Cap—Fuel Tank						
182	220195	Bracket—Fuel Tank						
186	66111	Connector—Fuel Pipe (Imperial Brass Co. No. 69-F) Note: 67218 Connector—Fuel Pipe Used on <i>Model 60300</i> Series type Nos. 0194, 942256.						

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		230318 Connector (at carburetor) Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0169, 0195, 0231, 942038, 942144, 942150, 942228, 942255, 942260; also used on <i>Model 61400</i> Series type Nos. 942609, 942642.			942584, 942609, 942617, 942637, 942642. 220755 Support—Fuel Tank Used on <i>Model 60300</i> Series type Nos. 0204, 942102, 942121, 942161, 942196; also used on <i>Model 61300</i> Series type Nos. 942549, 942561, 942563.	206	230149 Note:	Nut—Control Rod 21772 Nut—Control Rod Used on type No. 942561.
189	90366	Washer—Lock— 5/16 x 1/8 x 1/16"	197	93083	Screw—Tank Mtg. Sem	207	26855	Spring—Control Rod
195	91635	Connector—Fuel Filter	198	293934	Valve—Fuel Shut-Off	208	230194 Note:	Rod—Control 230323 Rod—Control Used on <i>Model 60400</i> , <i>61400</i> Series. 230367 Rod—Control (Automatic Choke) Used on <i>Model 60400</i> Series type Nos. 942144, 942148; also used on <i>Model 61400</i> Series type No. 942609.
196	220358 Note:	Support—Fuel Tank Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0154, 0195, 0226, 0230, 0241, 942038, 942067, 942070, 942085, 942118, 942141, 942220, 942236, 942251, 942255, 942257, 942261; also used on <i>Model 61300</i> , <i>61400</i> Series type Nos. 0163, 0174, 942531, 942551, 942560, 942632, 942638, 942654. 220607 Support—Fuel Tank Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0025, 942032, 942034, 942037, 942043, 942094, 942122, 942144, 942150, 942202; also used on <i>Model 61300</i> , <i>61400</i> Series type Nos. 0160, 0171, 0178, 942539, 942565, 942569, 942570,	199	292797 Note:	Outlet—Fuel Tank (Used with brass fitting—includes strainer) 295896 Outlet—Fuel Tank (Used with plastic fitting—includes strainer)	209	26925 Note:	Spring—Governor 260546 Spring— Mechanical Governor Used on <i>Model 60400</i> , <i>61400</i> Series. 260413 Spring—Gov. Used on <i>Model 60300</i> Series type Nos. 0173, 0183, 0184, 0194, 0196, 0207, 0217, 0242, 942231, 942256, 942264, 942266, 942267, 942273; also used on <i>Model 61300</i> Series type Nos. 942646, 942647, 942650, 942656.
			200	297309 Note:	Blade—Governor Used on <i>Model 60300</i> , <i>61300</i> Series on and after Serial No. 6212310. 221456 Guide—Air Used on <i>Model 60400</i> , <i>61400</i> Series on and after Serial No. 6212310.	219	296688	Governor Housing and Gear Assembly
			200A	294617 Note:	Blade—Governor (Used on <i>Model 60300</i> , <i>61300</i> Series before Serial No. 6212310) 220692 Guide—Air Used before Serial No. 6212310 on <i>Model</i> <i>60400</i> , <i>61400</i> Series.	220	221361 Note:	Washer—Thrust (.030" thick) 220673 Washer—Thrust (1/16" thick) Used on engines before Serial No. 6104010.
			201	26235 Note:	Link—Governor 260076 Link—Governor Uses: 260178 Spring Used on <i>Model 60400</i> , <i>61400</i> Series.	221	230177	Cup—Governor
			204	23688	Bushing—Gov. Lever	222	220691	Bracket—Mechanical Governor

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	Note:	294476 Bracket and Baffle—Mechanical Governor Used on <i>Model 60400</i> Series type Nos. 0061, 942043, 942055, 942070, 942097, 942119, 942144, 942148, 942150, 942181, 942184; also used on <i>Model 61400</i> Series type Nos. 0168, 0171, 0178, 942570, 942642, 942643, 942644.			942264; also used on <i>Model 61400</i> Series type Nos. 942609, 942642.	287	90050	Screw—Machine, Rd. Hd. —6-32 x 1/4"
223	220690	Lever—Mechanical Governor	245	68477	Gasket—Fuel Filter Bowl	288	90362	Washer—Lock—No. 6 x 3/64 x 1/32"
224	93067	Screw—Governor Lever Mounting Sem	246	298683	Bowl—Fuel Filter	289	23886	Support—Thermostat Shaft (Outer)
225	230181	Shaft—Governor Lever	247	99665	Yoke—Fuel Filter	290	294492	Bracket and Tube—Thermostat
226	220381	Follower—Gov. Crank	258	93062	Screw—Sem	291	26594	Thermostat
227	294077	Lever Assy. —Gov.	259	294502	Bracket—Control Wire Casing	292	23885	Support—Thermostat Shaft (Inner)
228	93100	Screw—Governor Lever Mounting	260	295756	Housing—Speed Control	293	23884	Stop—Thermostat Shaft
229	220680	Washer—Thrust	261	93105	Screw—Speed Control Housing Mounting Sem	294	92678	Screw—Set, Socket Head—6-32 x 5/16"
230	22826	Washer—Spacer	262	93394	Screw—Speed Control Housing Mounting Sem	295	230365	Shaft—Thermostat
231	93064	Screw—Gov. Housing to Crankcase Cover Mounting Sem	264	90355	Nut—Hex. —10-32	296	291044	Lever Assembly—Thermostat
232	260178	Spring—Governor Link	265	22372	Clamp—Casing	297	91811	Locknut—Exhaust Elbow
233	230253	Stop—Control Rod	266	290062	Control—Throttle	298	220859	Locknut—Muffler and Exhaust Elbow
234	220730	Clip—Control Rod		Note:	290463 Control—Throttle Used on type Nos. 942075, 942187.	299	294441	Muffler—Exhaust
240	89346	Filter Assembly—Fuel	267	90080	Screw—Machine, Rd. Hd. —10-32 x 7/16"	300	89966	Muffler—Exhaust
241	89347	Cover Assembly—Fuel Filter	268	66986	Casing—Control Wire—48" Long		Note:	89945 Muffler—Exhaust Used on <i>Model 60300</i> Series type Nos. 942111, 942201, 942239.
242	295913	Lever—Fuel Shut-Off		Note:	If a longer casing is needed, specify length in inches; if a shorter casing is needed order No. 66986 and cut to required length.			292054 Muffler—Exhaust Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 942025, 942026, 942084, 942105, 942169, 942176, 942180, 942228, 942244, 942260; also used on <i>Model 61300</i> , <i>61400</i> Series type Nos. 942537, 942558, 942618.
243	22547	Screen—Fuel Filter	269	26099	Wire—Control—54" Long			295905 Muffler—Exhaust Used on <i>Model 60300</i> Series type Nos. 0191, 0218, 0235, 942032, 942191, 942258, 942264, 942269.
244	92427	Connector—Fuel Pipe		Note:	If longer wire is needed, specify length by inches; if shorter wire is needed order No. 26099 and cut to required length.			
	Note:	230317 Connector—Fuel Pipe (brass fitting or No. 230318 plastic fitting) Used on <i>Model 60300</i> , <i>60400</i> Series type Nos. 0169, 0194, 0195, 0231, 942038, 942144, 942150, 942225, 942256, 942260,	270	63426	Locknut—Control Wire Casing			
			271	290568	Lever Assy. —Control			
			281	221090	Bracket—Top Speed Control Mounting			
			285	26687	Link—Choke			
			286	294491	Thermostat Assembly			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
303	91810	Elbow—Exhaust (45° Street) Note: 91812 Elbow—Exhaust (90° Street) Used on <i>Model 60300</i> , 60400 Series type Nos. 0016, 0153, 0161, 0180, 0195, 0232, 0245, 0249, 942049, 942062, 942091, 942109, 942114, 942143, 942147, 942149, 942161, 942162, 942168, 942172, 942175, 942206, 942231, 942250, 942255, 942268, 942274; also used on <i>Model 61300, 61400</i> Series type Nos. 942529, 942535, 942559, 942562, 942603, 942647.			61311, 61331, 61351, 61401, 61431 Series. 294338 Housing— Blower (for Rewind Starter) Used on <i>Model 60300</i> , 60400 Series type Nos. 0217, 0242, 942156, 942158, 942258; also used on <i>Model 61300, 61400</i> Series type Nos. 942526, 942527. 295190 Blower Housing and Brackets Assembly (for Electric Starter) Used on <i>Model 60300</i> , 61303, 61353 Series. 295816 Housing— Blower (for Rewind Starter) Used on <i>Model 60300</i> Series type Nos. 942176, 942225. 296792 Housing— Blower (for Wind-up Starter) Used on <i>Model 60306</i> , 60406, 61306, 61406 Series.			0208, 942074, 942095, 942096, 942117, 942145, 942151, 942162, 942174; also used on <i>Model 61300</i> , 61400 Series type Nos. 0150, 0152, 0156, 942535, 942557, 942559, 942562, 942564, 942573, 942593, 942630, 942635, 942636.
304	294260	Housing—Blower (for Rewind Starter) Note: 220870 Housing— Blower (for Rope Starter) Used on <i>Model 60300</i> , 60400 Series type Nos. 0061, 942043, 942055, 942070, 942097, 942119, 942144, 942148, 942150, 942181, 942184, 942215; also used on <i>Model 61300, 61400</i> Series type Nos. 0168, 0171, 0178, 942570, 942608, 942609, 942642, 942643, 942644. 294263 Housing— Blower (for Rope Starter) Used on <i>Model 60301</i> , 60311, 60331, 60351, 60401, 60431, 61301,	305	93158	Screw—Blower Housing Mounting Note: 92666 Screw—Cap 92778 Washer—Lock Used on <i>Model 60300</i> Series type Nos. 0225, 0226, 0227, 942152, 942155, 942170, 942193, 942215, 942217, 942248.	306	220478	Shield—Cylinder
			307	93042	Screw—Cylinder Shield Mounting Sem			
			308	220581	Cover—Cylinder Head Note: 220354 Cover— Cylinder Head Used on <i>Model 60300</i> , 60400 Series type Nos. 0182, 0200,	328	221038	Guard—Belt
						329	93014	Screw—Belt Guard Mounting Sem
						309	295188	Motor—Electric Starter
						310	93239	Bolt—Case
						311	295697	Brush—Starter Motor
						312	260404	Spring—Brush
						321	210711	Pulley—Starter Note: When ordering this pulley, order No. 67228 Vee Belt also.
						323	67228	Belt—Vee Note: 67038 Belt—Vee Used on engines before Serial No. 5905040.
						324	220648	Screen—Electric Starter Pulley
						325	293959	Pulley with Screen— Rope Starter (1/2" Hole in Pulley) Note: For Pulley with Screen with 5/8" Hole in Pulley—order No. 298731. 220547 Pulley—Rope Starter (1/2" Hole) Used on <i>Model 60300</i> Series type Nos. 0013, 0014, 942155. 221146 Pulley—Rope Starter (5/8" Hole) Used on <i>Model 60300</i> Series type No. 0211.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
330	29878	Rope—Starter						
	Note:	69932 Rope—Starter Used on <i>Model 60300</i> Series type Nos. 0175, 942207.						
331	62577	Washer—Flywheel (1/2" Hole)						
	Note:	For Washer with 5/8" Hole—order No. 220865.						
332	91708	Nut—Flywheel (1/2-20 Left Hand Thread)	334	93381	Screw—Armature Mounting Sem			942067, 942070, 942088, 942099, 942100, 942110, 942119, 942126, 942140, 942144, 942146, 942150, 942159, 942178, 942181, 942242; also used on <i>Model 61300, 61400</i> Series type Nos. 942526, 942544, 942567, 942570, 942581, 942591, 942608, 942609, 942622, 942628, 942638, 942642.
	Note:	For Flywheel Nut with 5/8-18 Right Hand Thread order No. 92284.	335	93381	Screw—Coil Lead Mounting Sem			
				Note:	92984 Screw—Coil Lead and Armature Mounting Sem	337	298809	Plug—Spark (with gasket) (1-1/2" high—38 MM)
333	298502	Armature—Magneto (Used on and after Serial No. 6212310)			Used on <i>Model 60300, 60400</i> Series type Nos. 942152, 942155, 942170, 942193, 942215, 942217, 942248, 942253.		Note:	Spark Plugs 298809, 29693, and 293918 use Ignition Cable Terminal No. 221798.
	Note:	298274 Armature—Magneto Used on <i>Model 60300</i> Series type Nos. 0013, 0014, 0188, 0189, 0190, 0225, 0226, 0227, 0249, 942274.	336	292149	Cable—Ignition (Standard—Used before Serial No. 6212310—Cables used after this serial number are integral with the ignition coil.) Also used on all type No. 942246 engines.			29693 Plug—Spark (with gasket) (2" high—51 MM)
333A	291617	Armature—Magneto Used on all engines, except those under note, before serial No. 6212310. Also used on all type No. 942246 engines.						291954 Plug—Spark (with gasket) Used on <i>Model 60300, 60400</i> Series type Nos. 0225, 0226, 0227, 942152, 942155, 942170, 942193, 942215, 942217, 942248.
	Note:	295680 Armature—Magneto Uses: 66298 Bushing—Spark Plug Term. 92704 Terminal—Spark Plug 295179 Shielding—Cable Used on <i>Model 60300, 60400</i> Series type Nos. 942152, 942155, 942170, 942193, 942215, 942217, 942248, 942253.		Note:	293141 Cable—Ignition Used on <i>Model 60300, 60400</i> Series type Nos. 942152, 942155, 942170, 942193 before Serial No. 6004210. 294321 Cable—Ignition Used on type Nos. 942049, 942143. 294519 Cable—Ignition Used on type No. 942203. 294577 Cable—Ignition Used before Serial No. 6210011 on <i>Model 60300, 60400</i> Series type Nos. 942038, 942043, 942055,			293918 Plug—Spark (with gasket) Used on <i>Model 60300, 60400</i> Series type Nos. 0162, 0163, 0168, 0212, 942035, 942071, 942135, 942136, 942148, 942154, 942220, 942230; also used on <i>Model 61300, 61400</i> Series type Nos. 942547, 942645.
						340	26018	Spring—Breaker Arm

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
341	93381	Screw—Breaker Arm Mounting Sem	365	93241	Screw—Plug Mtg. (long)	384	62899	Washer—Thermostat
342	65704	Plunger—Breaker Point	366	93240	Screw—Plug Mtg. (short)	385	93110	Screw—Fuel Pump Hole Cover and Spacer Mtg.
344	93042	Screw—Condenser Clamp Mounting Sem	367	91183	Screw—Cap, Hex. Hd. —1/4-28 x 5/8"	386	27314	Gasket—Cover and Fuel Pump Mounting
345	220366	Cover—Breaker Point and Condenser	369	220705	Spring—Control Friction	387	290465	Pump Assy. —Fuel
346	93014	Screw—Sem	370	66432	Washer—Plain	388	22735	Lever—Fuel Pump
347	221808	Switch—Stop	371	260275	Restrictor—Belt	389	23783	Pin—Fuel Pump Lever
	Note:	293739 Switch—Stop Used on Model 60300 Series type No. 0201.	372	220477	Clamp—Condenser	390	26587	Spring—Fuel Pump Lever
348	67118	Block—Stop Switch	373	92987	Nut—Condenser Term.	391	21695	Body—Fuel Pump
349	221077	Blade—Switch	374	92813	Washer—Lock— Shakeproof No. 1210-06.	392	26588	Spring—Fuel Pump Diaphragm
350	221078	Clamp—Switch Blade	375	294628	Breaker Points and Condenser Set	393	22740	Screen—Fuel Pump Filter
351	93218	Screw—Stop Switch		Note:	299061 Ignition Kit Includes: 294628 Point Set 65704 Plunger 61760 Key— Flywheel	394	290622	Diaphragm—Fuel Pump
352	66068	Washer—Insulating				395	290623	Valve—Fuel Pump
353	92791	Washer—Lock— Shakeproof				396	66204	Gasket—Fuel Pump Valve
354	90576	Nut—Hex. —8-32				397	21694	Head—Fuel Pump
356	296185	Wire—Ground				398	210533	Spacer—Fuel Pump Mtg.
	Note:	391115 Wire—Ground Used on Model 60300 Series type Nos. 0173, 0183, 0184, 0194, 0196, 0207, 0217, 0242, 0248, 942231, 942266, 942267, 942273; also used on Model 61300 Series type Nos. 942650, 942656.	378	222032	Washer—Needle Valve Packing	399	27699	Gasket—Spacer
357	91539	Key—3/16" Square	379	22984	Cover—Fuel Pump Hole	400	230010	Wrench—Socket Screw
358	297275	Gasket Set	380	62199	Washer—Plain	401	21927	Spacer—Carb. Elbow
362	291630	Shield—Spark Plug (with stop switch)	381	91419	Screw—Cap, Hex. Hd. —1/4-20 x 5/8"		Note:	Used only on engines Equipped with auto- matic choke.
	Note:	66538 Elbow—Spark Plug Used on Model 60300 Series type No. 0201. 89742 Shield—Spark Plug Used on Model 60300, 60400 Series type Nos. 0233, 942088, 942146.	382	93158	Screw—Sem	455	296455	Cup, Hub and Spring Assembly
				Note:	92636 Screw—Cap, Hex. Hd. —1/4-20 x 2" 230352 Spacer Used on Model 60300, 60400 Series type Nos. 0025, 942032, 942034, 942037, 942043, 942094, 942122, 942144, 942150, 942202; also used on Model 61300, 61400 Series type Nos. 0160, 0171, 0178, 942539, 942565, 942569, 942570, 942584, 942609, 942617, 942632, 942637, 942642.	456	221222	Plate—Retainer
363	19069	Puller—Flywheel (Optional Accessory)				458	296305	Handle Assembly. — Cranking
364	295698	Plug—Connector				459	221332	Pawl—Ratchet
						460	93272	Retainer—Ratchet Pawl
						461	93231	Screw—Handle Mtg.
						462	221237	Washer—Handle Mtg.
						463	296445	Holder Assy. — Flywheel
						464	93291	Rivet—Holder Assy. Mounting
						465	221226	Washer—Holder Assy. Mounting
						466	93272	Retainer—Holder Control Knob
						467	211017	Knob—Control
						506	90200	Screw—Machine Fil. Hd. —8-32 x 1/2"

Included in Gasket Set—
Part No. 297275.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
507	66895	Insulator—Terminal	524	65304	Gasket—Oil Filler Cap			Used on engines with
	Note: 66935	Insulator—Term.	525	91258	Nipple—Oil Filler			vented breather and
		Used on <i>Model 60300</i> ,	527	220754	Clamp—Breather Tube			No. 296766 Air
		60400 Series type	528	230346	Tube—Breather			Cleaner (Ref. No. 536)
		Nos. 942152, 942170,	529	66578	Grommet—Breather	544	296769	Armature—Starter
		942215, 942217,			Tube	545	296770	Case Assembly—Long
		942248.	530	296304	Housing Assy.—Pawl			Shaft End
508	93294	Screw—Blower Housing	531	230615	Ratchet—Top Starter	546	296775	Case Assembly—Short
		Mounting Sem	532	260500	Washer—Spring			Shaft End
513	296567	Clutch Assembly—	533	67478	Knob—Stop	547	270025	Washer—Fiber
		Electric Starter	534	93323	Screw—Air Cleaner	548	221381	Washer—Thrust (Steel)
515	260537	Spring—Ratchet Pawl		Note: 63949	Stud—Air	600	270003	Spacer—Air Cleaner
516	260374	Spring—Connector			Cleaner	601	93053	Clip—Breather Tube (2)
521	297973	Shielding—Ignition			Nut—Wing	602	27666	Gasket—Air Cleaner
		Cable			Used on <i>Model 60300</i>			(Used with vented
		Used after Serial No.			Series type Nos.			breather)
		6209290 on cables			0173, 0183, 0184,	603	294873	Cleaner Assembly—
		integral with ignition			0194, 0196,			Air (with mounting
		coil; also used on			942256, 942265,			stud) (Used with
		type Nos. 942253,			942266, 942267,			vented breather)
		942261.			942273; also used on	604	294864	Cover and Filter—
		298445 Shielding—			<i>Model 61300</i> Series			Air Cleaner
		Ignition Cable			type No. 942656.			(with mounting stud)
		92704 Terminal—Spark	535	27987	Element—Air Cleaner			(Used with vented
		Plug	536	296766	Cleaner Assy.—Air			breather)
		66298 Insulator—	537	27994	Gasket—Air Cleaner	608	294259	Starter Assy.—Rewind
		Terminal		Note: 27666	Gasket—Air		Note:	For 110 Volt Electric
		Used on type Nos.			Cleaner			Starter Kit—order
		0225, 0226, 0227.						No. 295325.
523	69345	Cap—Oil Filler				822	296732	Starter Assy.—Wind-Up